

LAB PUA

LAB PUA HIGH FLOW COMPLETE AU Standard


- ✓ Cartridge life of up to 12 months with easy replacement
- ✓ High performance filtration, certified to remove & reduce sediment, chlorine, bad taste, odours and cysts, including giardia and cryptosporidium.
- ✓ Fast filtered water from the kitchen mixer tap.





The Lab Pua efforts for making perfect pure and clean water

Highflow Inline Filter System

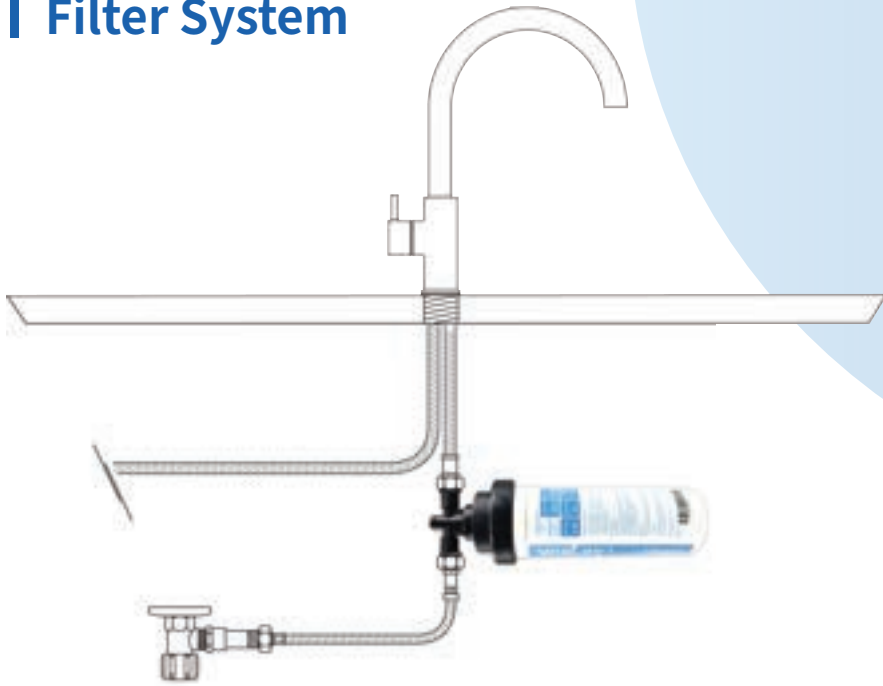

Strong Connection



Installation Guide

- 1 Turn off main tap water.
- 2 Rotate the old cartridge counter clockwise 1/4 and pull it out.
- 3 Insert the new cartridge into the filter head and rotate clockwise 1/4 turn.
- 4 Please ensure cartridge is mounted vertically.
- 5 Turn on the main tap water and check for leaks. If a leak occurs, repeat steps 1 - 4. If this does not work turn off the tap and call LAB PUA customer service.
- 6 Flush filter for 10 minutes before use.